

SPECIFICATIONS

- Item: DBR4 Dual Band Xross Gemini ExpressLRS Receiver
- Type: ISM 2.4G/ FCC 915M
- MCU: ESP32
- RF chip: Semtech LR1121 x 2
- Telemetry RF power: Max 100mw
- Antenna: 2x 2.4GHz wire & 2x 915MHz wire
- Frequency Range: 2.404 - 2.479 GHz / 903.5 - 926.9 MHz
- Maximum receive refresh rate: 500Hz (1000Hz coming soon in ExpressLRS V3.4)
- Minimum receiver refresh rate: 50Hz
- Working voltage: DC 4.5 - 8.4V
- Weight: Without antennas 2.70g / With antennas 5.30g
- Dimension: 27. 20*27. 20mm
- Firmware Version: ExpressLRS v3.3.2 pre-installed
- Bus interface: CRSF

INCLUDES

- 1 * DBR4 Dual band Xross Gemini ExpressLRS Receiver
- 2 * 2.4 GHz wire antenna
- 2 * 915 MHz wire antenna
- 1 * CRSF wire
- 4 * 4mm Red vibration dampeners
- 4 * 3mm Black vibration dampeners
- 1 * Manual card

DEFAULT FIRMWARE

RadioMaster DBR4 Dual band Xross Gemini Receiver

For more information, please visit the ELRS website:

<https://www.expresslrs.org/2.0/>

CONFIGURATION

Identifier	Configuration/MSP	Serial RX
USB VCP	<input checked="" type="checkbox"/> 115200 ▾	<input type="checkbox"/>
UART1	<input type="checkbox"/> 115200 ▾	<input type="checkbox"/>
UART2	<input type="checkbox"/> 115200 ▾	<input checked="" type="checkbox"/>

Open **Betaflight** Configurator, go to **Ports** tab and enable the corresponding UART as a Serial RX (e.g. UART2 as shown above). **Save** and **Restart**

Receiver

Serial (via UART) ▾ Receiver Mode

• The UART for the receiver must be set to 'Serial RX' (in the Ports tab)
• Select the correct data format from the drop-down, below:


CRSF ▾ Serial Receiver Provider

On the **Configuration** tab, click on **Serial-based receiver** on the **Receiver** panel, and select **CRSF**.

TRADITIONAL BINDING

Binding Phrase field must be uncommented in **Device options** on the RX.

1. Power **OFF** your transmitter/radio.
2. Plug in and unplug your receiver **3 times**.
3. Make sure the LED is doing a quick **double blink**, which indicates the receiver is in bind mode.
4. Power **ON** your transmitter/radio and use the [BIND] button on the ExpressLRS Lua script, which sends out a binding pulse.
5. If the receiver has a **solid light**, it's bound!

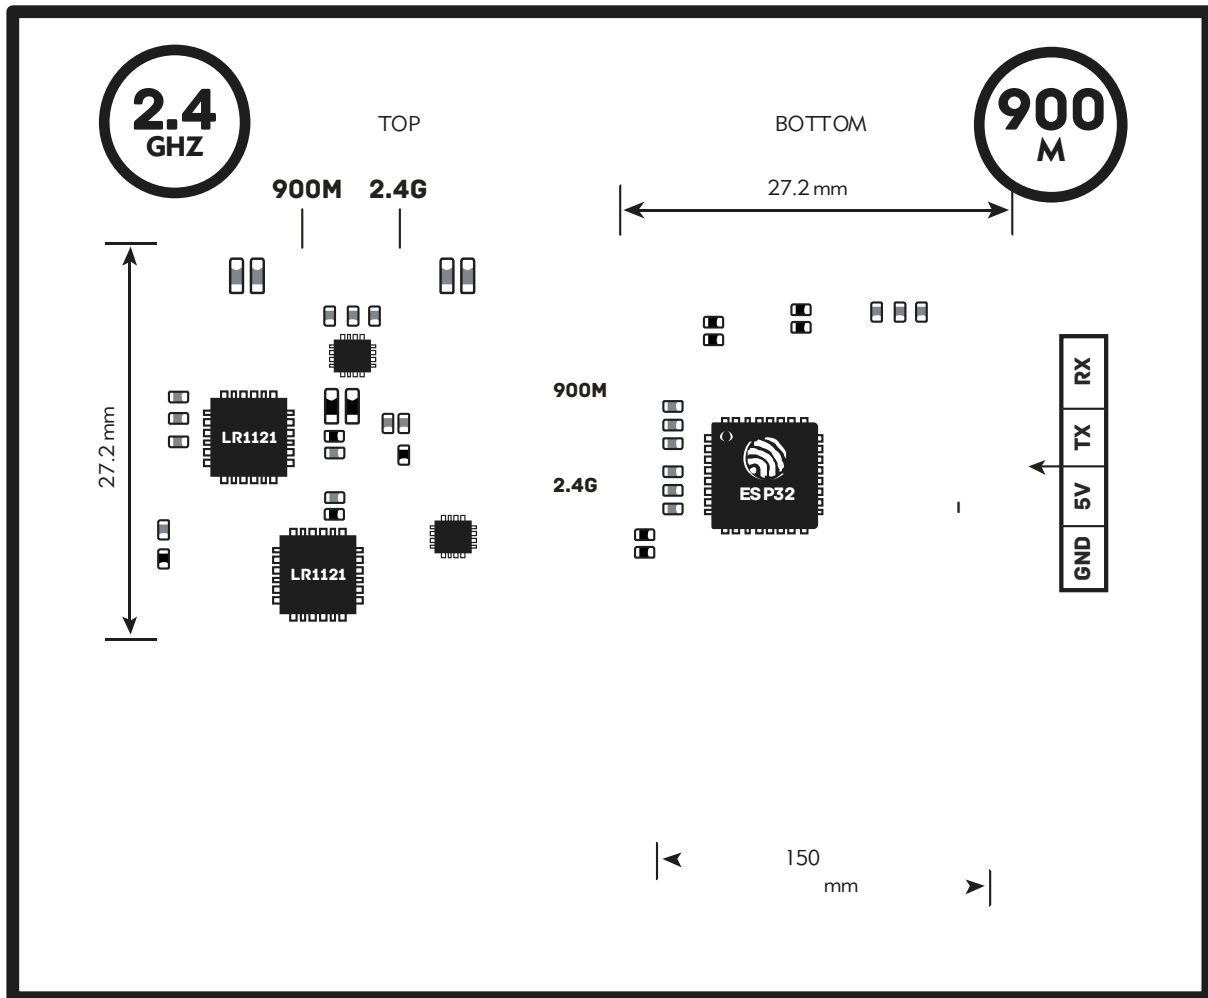

规格参数

- 型号: DBR4 双频双路 Gemini ExpressLRS 接收机
- 类型: ISM 2.4G/ FCC 915M
- MCU: ESP32
- 射频芯片: Semtech LR1121 x 2
- 射频功率: 最大Max 100mw
- 固件版本: 预装ExpressLRS v3.3.2
- 总线接口: CRSF
- 天线: 2x2.4GHz天线 & 2x915MHz天线
- 频率范围: 2.404 - 2.479 GHz / 903.5 - 926.9 MHz
- 最大接收机刷新率: 500Hz (ExpressLRS V3.4 将很快支持1000Hz)
- 最小接收机刷新率: 50Hz
- 工作电压: DC 4.5 - 8.4V
- 重量: 2.70g (不含天线) / 5.30g (含天线)
- 尺寸: 27.20 * 27.20mm

包装清单

- 1 * DBR4 双频 Xross Gemini ExpressLRS 接收机
- 2 * 2.4 GHz 天线
- 2 * 915 MHz 天线
- 1 * CRSF线材
- 4 * 4mm 红色减震垫
- 4 * 3mm 黑色减震垫
- 1 * 服务卡

固件下载

RadioMaster DBR4 Dual band Xross Gemini Receiver

For more information, please visit the ELRS website:

<https://www.expresslrs.org/2.0/>

设置

Identifier	Configuration/MSP	Serial RX
USB VCP	<input checked="" type="checkbox"/> 115200	<input type="checkbox"/>
UART1	<input type="checkbox"/> 115200	<input type="checkbox"/>
UART2	<input type="checkbox"/> 115200	<input checked="" type="checkbox"/>

打开Betaflight Configuration, 转到Ports端口选项卡并启用相应的UART作为Serial RX (例如, 如上所示的UART2) 保存并重新启动。



在Configuration选项卡上, 单击Receiver面板上的Serial-based receiver, 并选择CRSF。

对频方法

- 1: 关闭遥控器
- 2: 重复给接收机上电三次, 接收机灯双闪, 表明接收机处于对频模式
- 3: 开启遥控器, 进入ExpressLRS的LUA操作界面, 选择到【BIND】按键确认
- 4: 接收机灯常亮表明对频成功